


SECTION

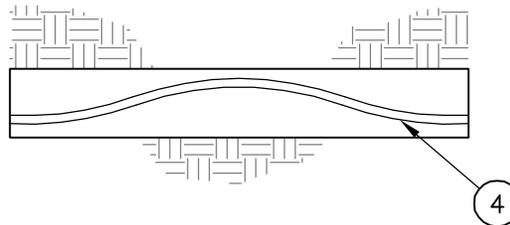

PLAN

1. IRRIGATION LATERAL.
2. WIRING: TAPE AND BUNDLE WIRING AT 10'-0" INTERVALS. COMMON TRENCHING OF IRRIGATION PIPE AND REMOTE CONTROL VALVE WIRING TO BE DONE WHERE EVER POSSIBLE (INSTALL TRACE WIRE ALONG ALL MAIN LINE PIPE THAT DOES NOT HAVE CONTROL WIRES ADJACENT TO PIPE).
3. MAIN LINE: ALL MAIN LINE TO BE INSTALLED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS. MAINTAIN MIN. 4" SPACE BETWEEN PARALLEL PIPE LINES AND 6" VERTICAL SPACE BETWEEN MAIN LINE AND LATERAL LINES. WIRING AND MAIN LINE TO BE AT SAME MIN. DEPTH OF 18".
4. ALL PVC PIPE TO BE SNAKED IN TRENCHED AS SHOWN.
5. BACKFILL, SEE SPECS.
6. ALL PIPING UNDER PAVING SHALL BE SLEEVED.



STANDARD DETAILS

TRENCHING

COTTAGE GROVE, MINNESOTA

LAST REVISION:
JAN 2014

PLATE NO.
IRR-9